


MODE SWITCH (S1) SHOWN IN "C.W." POSITION.
 STANDBY SWITCH (S2) SHOWN IN "STANDBY" POSITION.
 NOISE LIMITER SWITCH (S3) SHOWN IN "ON" POSITION.
 MUTING SWITCH (S4) SHOWN IN "OFF" POSITION.
 MAINS SWITCH (S5) SHOWN IN "OFF" POSITION.

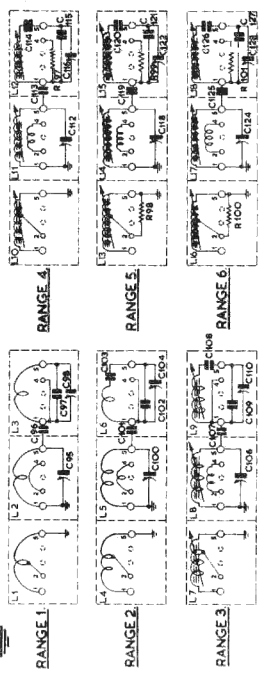

V.H.F. COMMUNICATIONS RECEIVER. (TYPE 770R)